

INSTRUCTION SHEET

for Door Gasket Kit No. 675582

675582

NOTE: On 1969 models (STU/STF), gasket is held in place by an aluminum retainer and four (4) screws. For these models use only 300452 gasket and disregard the following instructions.

In all other applications pick the gasket that matches your original and follow steps below.

1. Remove old gasket. Clean door frame to remove all old adhesive. See Figure 1.

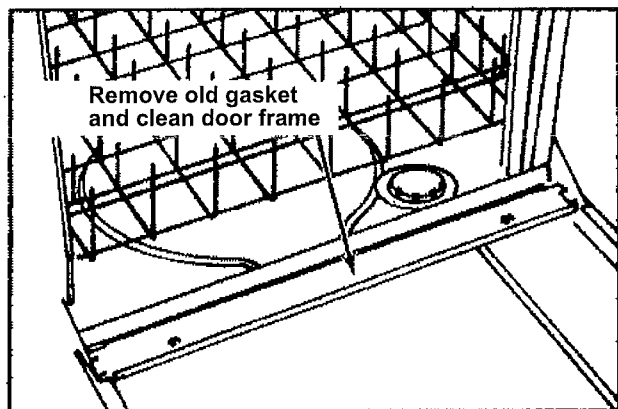


Figure 1

2. Apply a thin even coat of 675444 adhesive to the metal surface and coated side of door gasket. Use the spreading brush provided.
3. Allow adhesive to dry until very tacky.
4. Put one end of gasket in place as close to the outside edge of the door frame as possible. After starting one end, hold gasket up in the middle. Now set the other end in place on door frame. See Figure 2.

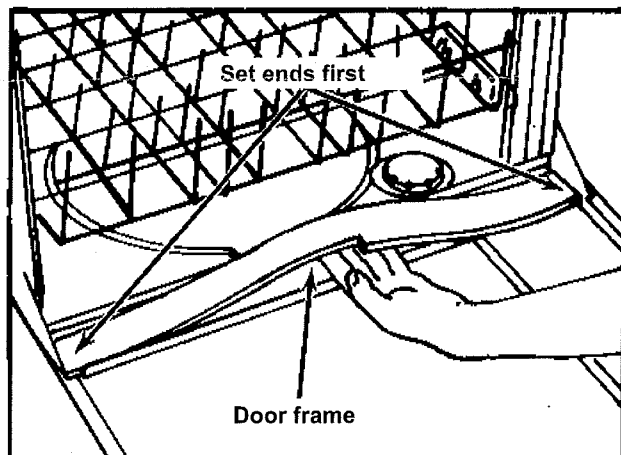


Figure 2

5. After starting the two ends, carefully put the center part of gasket on the door frame. This is important or the gasket will tend to "grow." Do not start at one end and work across.
6. (FOR PLASTIC DOOR MODELS ONLY). Use a razor blade to trim any part of the gasket that overlaps the vent holes in the door. The gasket should appear as in Figure 3.

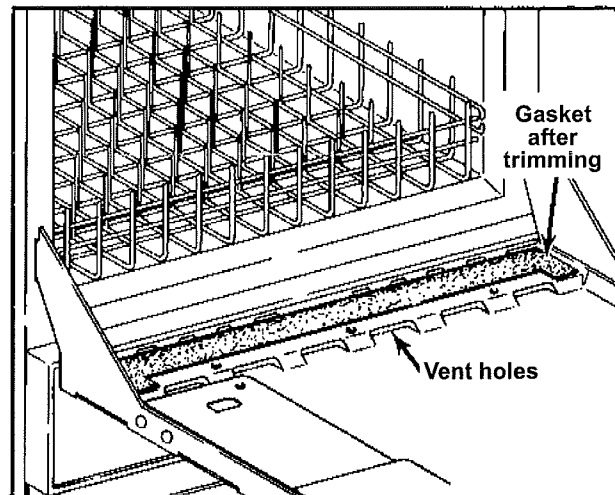


Figure 3

7. Reassemble door. Allow the adhesive to cure for 24 hours before using dishwasher.